

Model: SGSL-130

## Fast Stick 4 pack


- Always Wear A Safety Harness With This Product
- Practice Using At Ground Level
- Weight Limit **300 lbs.**

### Parts List

<b>A</b>	4 Fast Stick Section	Part # GL-130
<b>B</b>	8 Tree Brace	Part # GTB-130
<b>C</b>	8 Buckle Strap Assy	Part # GBA-130
<b>D</b>	8 Hook	Part # GH-130
<b>45</b>	8 M8x45mm Bolt	Part # 1845W
	w/wingnut	



Thank you for purchasing Guide Gear's Fast Stick by Primal Vantage. The fast stick does require some assembly. You will find detailed instructions with your fast stick. The following instructions will tell you how to assemble and use your fast stick. Every year hunters are seriously injured in treestand accidents. Please carefully read and follow these instructions. For customer service please visit [www.treestandcustomerservice.com](http://www.treestandcustomerservice.com) or call 1-800-722-7345 and ask for Primal Vantage

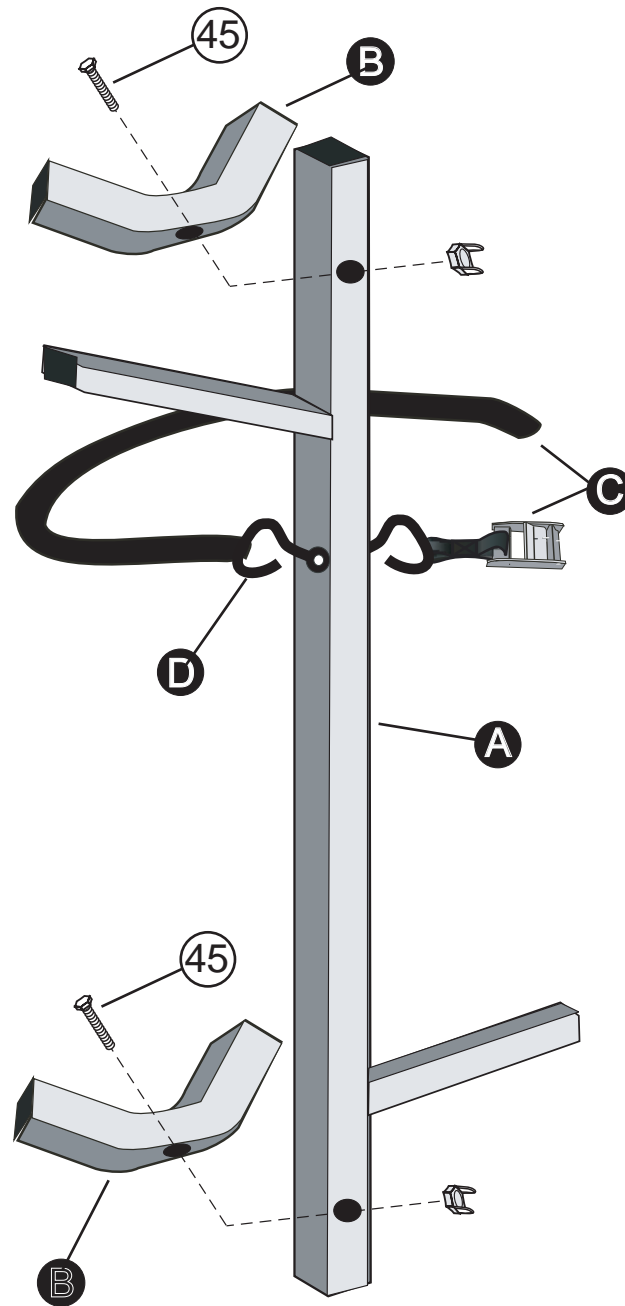



### Warning Warning

1. **ALWAYS** read all warnings and instructions before each use of fast stick. Failure to read all warnings and instructions before each use of fast stick may result in serious injury or death.
2. Remove all contents from box. Remove all cardboard from the product. Inspect for any damaged or missing pieces. **DO NOT** assemble or use fast stick if any parts are missing or damaged. Using the fast stick with missing or damaged parts may result in serious injury or death. Missing or damaged parts may be obtained from the address and phone number listed below.
3. **DO NOT** use fast stick if any bolts or nuts are loose, bent or crooked.
4. Be sure to retighten all bolts before each new use of fast stick.
5. Weight limit of this fast stick is **300 lbs.** **DO NOT** use fast stick if you or your combined weight with any equipment exceeds **300 lbs.**
6. **ALWAYS** use a full body safety harness with climbing belt when using this fast stick. Failure to use a safety harness with climbing belt may result in serious injury or death.
7. **NEVER** use fast stick if you have dizzy spells, a heart condition, are afraid of heights, have been advised by a doctor or other healthcare provider not to climb, or have any condition that would impair your ability to climb up or down or use fast stick as it could result in serious injury or death. Please consult a physician prior to use.
8. **DO NOT** use fast stick under the influence of alcohol, medication, or any illegal substances. Using the fast stick while under influence of any of these substances may result in serious injury or death.
9. **NEVER** use fast stick during inclement weather. **DO NOT** use fast stick during thunderstorms or any other weather conditions that include (but not limited to) lightning, freezing rain that could create slippery or dangerous conditions.
10. **DO NOT** use the fast stick unless the ground is dry or level. Failure to use fast stick when the ground is dry or level may result in serious injury or death.
11. **NEVER** use fast stick on a tree that is dead, diseased, leaning, or on wet and uneven ground as the tree may fall, break, or uproot and may result in serious injury or death.
12. **DO NOT** leave your fast stick outside all year round. It must be stored inside when not in use.
13. **NEVER** climb fast stick with your weapon. Make sure that the unloaded firearm gun barrel is pointed toward the ground when raising or lowering it to your stand. Always use a safe hoist/lift system on the opposite side of the tree from which you are climbing.
14. **ALWAYS** unload your weapon and use safety lock while raising or lowering your weapon. Failure to unload your weapon may result in serious injury or death.
15. Use fast stick on trees with a minimum diameter of 9" and maximum of 20".
16. **ALWAYS** have a communication device on your person and easily accessible. Immediate access to another person may save your life. In the event of an accident, a rescue plan must be place and able to be incorporated immediately.
17. **DO NOT** fall asleep in your stand as you may potentially fall out resulting in serious injury or death.

# Fast Stick Use Instructions

1. Assemble each Strap to each Buckle together. **(See Buckle Instructions)**.
2. Place the fast stick section firmly against the tree so that the tree braces are against the tree. The first step of the fast stick should not be higher than 12 inches from the ground. Slide the loop of the strap onto the hook assembled on the fast stick section **(Fig. 1)**.
3. Wrap the strap around the back of the tree, make sure that the webbing does not twist.
4. Slide the loop on the buckle strap to the other hook on the fast stick section.
5. Pull the loose end of the strap to tighten the slack. **(Fig. 2)**.
6. Pull down on the fast stick to seat it firmly into position.
7. Attach your safety harness with climbing belt to the tree **(See your Manufacturer's Instructions)**.
8. Step carefully onto the first step of the first section and apply weight to ensure the section is locked securely to the tree and will not slide. Be sure the tree you are using is not dead or leaning.
9. Attach a rope to another section of the fast stick.
10. Climb the first section already connected to the tree using your safety harness with climbing belt. When you reach the top of the first section, hoist the second section to your position. Attach the second section no more than 8" above the first step. Repeat steps 2 through 8 for the remaining sections. Make sure you hoist each section up one at a time to attach. **DO NOT** climb with fast stick sections in your hands.
11. To remove fast stick sections climb down to the 3rd section, remove the strap from the 4th section and use a rope to lower the section to the ground. Repeat this process for other sections. **ALWAYS** make sure you are standing on the section below the one you are removing.

\*\*\*Be sure as you secure each section you carefully step onto the bottom step to ensure the section is not going to slide or shift. \*\*\*

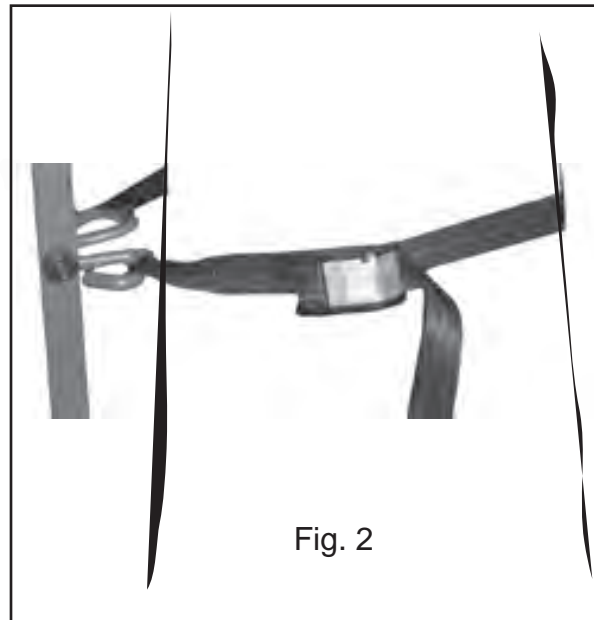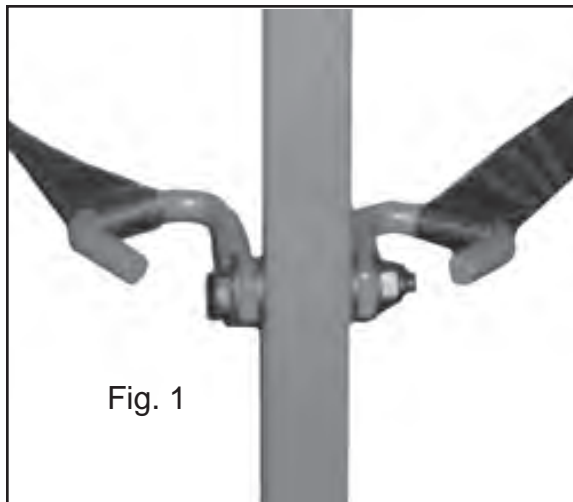

## Warning ⚠ Warning ⚠ Warning

1. **ALWAYS** read all warnings and instructions before each use of stick ladder. Failure to read all warnings and instructions before each use of stick ladder may result in serious injury or death.
2. Remove all contents from box. remove all cardboard from the product. Inspect for any damaged or missing pieces. **DO NOT** assemble or use stick ladder if any parts are missing or damaged. Using the stick ladder with missing or damaged parts may result in serious injury or death. Missing or damaged parts may be obtained from the address and phone number listed below.
3. **DO NOT** use stick ladder if any bolts or nuts are loose, bent or crooked.
4. Be sure to retighten all bolts before each new use of stick ladder.
5. Weight limit of this stick ladder is **300 lbs**. **DO NOT** use fast stick if you or your combined weight with any equipment exceeds **300 lbs**.
6. **ALWAYS** use a full body safety harness with climbing belt when using this stick ladder. Failure to use a safety harness with climbing belt may result in serious injury or death.
7. **NEVER** use stick ladder if you have dizzy spells, a heart condition, are afraid of heights, have been advised by a doctor or other healthcare provider not to climb, or have any condition that would impair your ability to climb up or down or use stick ladder as it could result in serious injury or death. Please consult a physician prior to use.
8. **DO NOT** use stick ladder under the influence of alcohol, medication, or any illegal substances. Using the stick ladder while under influence of any of these substances may result in serious injury or death.
9. **NEVER** use stick ladder during inclement weather. **DO NOT** use stick ladder during thunderstorms or any other weather conditions that include (but not limited to) lightning, freezing rain that could create slippery or dangerous conditions.
10. **DO NOT** use the stick ladder unless the ground is dry or level. Failure to use stick ladder when the ground is dry or level may result in serious injury or death.
11. **NEVER** use stick ladder on a tree that is dead, diseased, leaning, or on wet and uneven ground as the tree may fall, break, or uproot and may result in serious injury or death.
12. **DO NOT** leave your stick ladder outside all year round. It must be stored inside when not in use.
13. **NEVER** climb stick ladder with your weapon. Make sure that the unloaded firearm gun barrel is pointed toward the ground when raising or lowering it to your stand. Always use a safe hoist/lift system on the opposite side of the tree from which you are climbing.
14. **ALWAYS** unload your weapon and use safety lock while raising or lowering your weapon. Failure to unload your weapon may result in serious injury or death.
15. Use stick ladder on trees with a minimum diameter of 9" and maximum of 20".
16. **ALWAYS** have a communication device on your person and easily accessible. Immediate access to another person may save your life. In the event of an accident, a rescue plan must be place and able to be incorporated immediately.
17. **DO NOT** fall asleep in your stand as you may potentially fall out resulting in serious injury or death.

# DETAILED S-HOOK BUCKLE AND STRAP INSTRUCTIONS

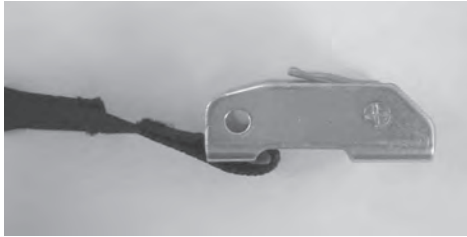


Fig. 1

1. Hold buckle as shown in (Fig. 1)

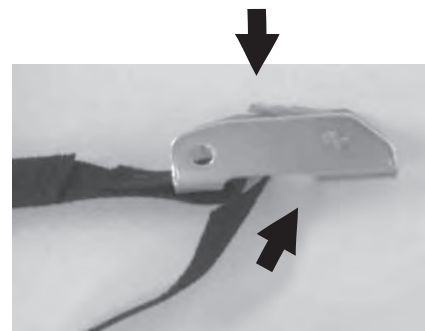


Fig. 2

2. Press down on latch and insert strap underneath teeth and flat piece of metal as shown in (Fig. 2).



Fig. 3

3. Pull strap to desired length. (Fig. 3)

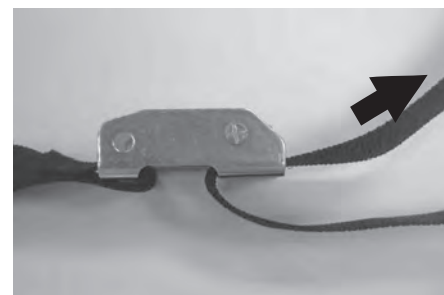


Fig. 4

4. Wrap strap around tree and insert hooks into holes on tree brace. Pull slack until tightened. (Fig. 4)

**Always** tug on strap to make sure it is secured by the buckle